



# Table Printer

User Manual

# Warnings

- Avoid using the printer in any harsh environment.
- Only trained professionals are allowed to do repair work.
- Turn power off before connecting/disconnecting the power source.
- Do not spill liquids on the printer as that could damage the printer.

# Table Printer

## User Manual / Table of Contents

Getting Started .....	4
Overview .....	4
Contents .....	4
Preparation .....	4
Using Printer .....	5
How To Print.....	5
More Info .....	6
Troubleshooting .....	6
Technical Support .....	6

# Table Printer

User Manual / Getting Started

## Overview

Thank you for using Inscale for your important application. This manual covers how to use our table thermal printer.

## Contents

- Table thermal printer
- Serial cable
- 8.5V AC adapter

## Preparation

1. Carefully remove contents from the package.
2. Connect the serial printer cable (included) from the printer to the RS-232 of the indicator; Tighten the screws on both sides.
3. Open the printer's cover and place a roll of thermal paper inside; Remember to smooth out the surface of the thermal paper.
4. Turn the printer's ON/OFF switch to the OFF position.
5. Plug in the AC adapter from the printer to a surge protected power outlet.
6. Turn the printer ON/OFF switch to the ON position.

# Table Printer

## User Manual / Using Printer

### How To Print

After the printer has been properly prepared (as shown in the “Preparation” section of this manual), the printer is now ready for use:

1. To change to printing mode press the “SEL” button once and the Green status light should be ON; If the Green status light is already ON, then pressing the “SEL” button is not necessary since the printer is already in printing mode.
2. Press the “Print” button on the indicator, and the printer should start printing; Remember to setup the indicator correctly to enable printing function.
3. Repeat step 2 to print multiple readings from the indicator.
4. After printing is done, press the “SEL” button once to exit the printing mode. You should now see the Green status light OFF.
5. To roll paper out, press the “LF” (line feed) button; Press “LF” button again to stop line feed.

# Table Printer

User Manual / More Info

## Troubleshooting

Q: The printer is not working.

A: Make sure you have connected power to the printer.

A: Make sure the thermal paper inside the printer is placed correctly.

A: Make sure the cover of the printer is closed completely.

A: Make sure the indicator is set up to have the Print function activated.

## Technical Support

Please email to [scaletech@abcs.com](mailto:scaletech@abcs.com) if you have any technical question.